

**Detailed Instruction for
Husqvarna Garden Tractor
K66 Installation**



**Tuff-Torq K66 Trans-axle
Upgrade**

FOOT PEDAL INSTALLATION SUPPLIMENT
Applicable to Husqvarna and Craftsman


Version 2.0, 8/18/2018

Part One: Removal of the HAND CONTROL.

General procedure:

- Remove fenderdeck.
- Remove old K46 transaxle and associated Hand Control parts.
- Remove brake shaft.
- Install the new shaft.
- Connect the new Motion Control Rod. (As part of the K66 Upgrade installation.)

PROCEDURE:

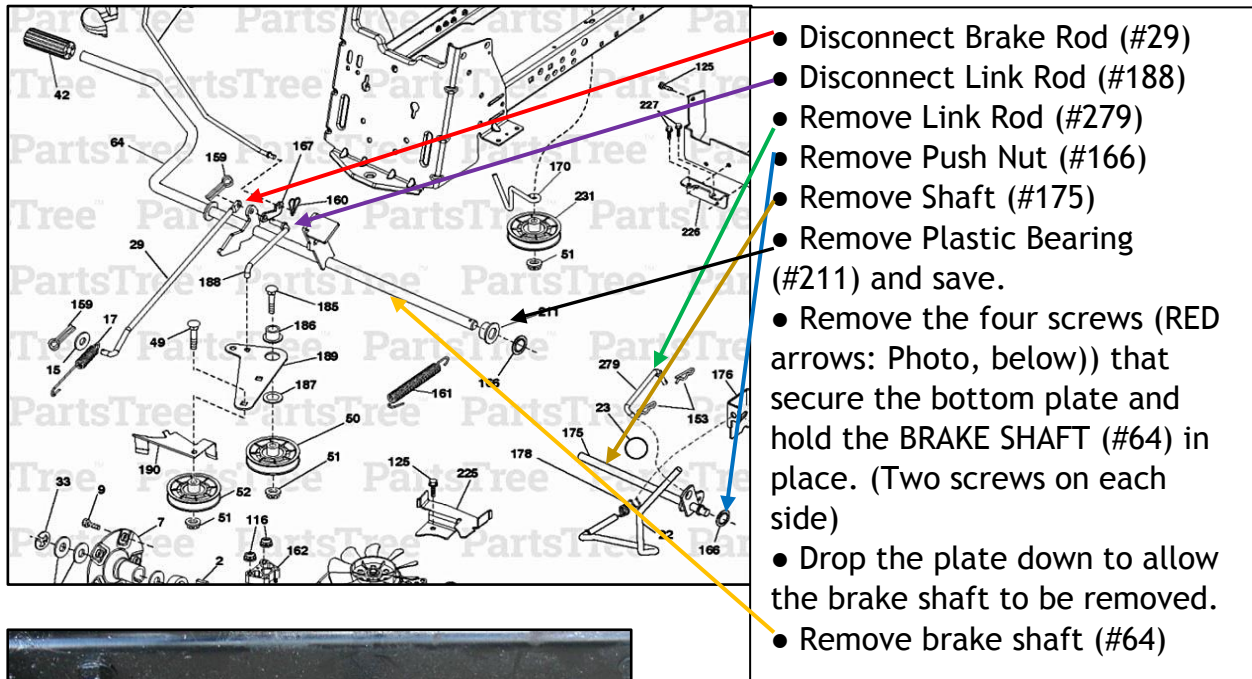

Be sure to set aside all the pins, clips, screws and parts that were disconnected or removed. Several will be reused.

Now go to Page 3 for Installation of the new FOOT PEDAL Assembly.

